



UPUTSTVO ZA MONTAŽU ČELO SLEMENJAKA UNI




1 Gornja kapa slemena mora da prevazilazi kraj približno 15 mm.

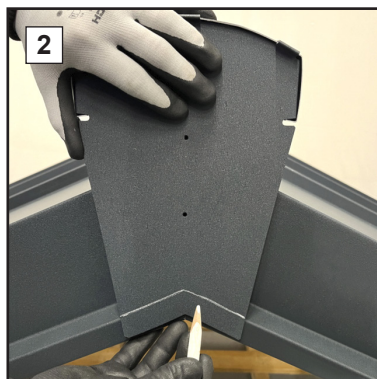


2 Označite deo koji strči sa donje strane čela i odsecite nepotreban materijal.

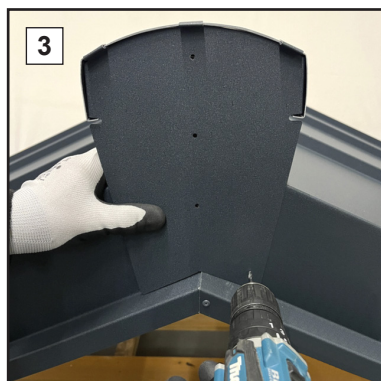


3 Pričvrstite čelo zakovicama.

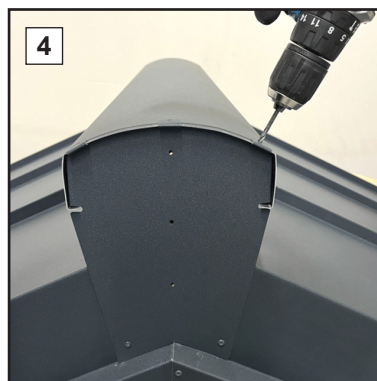

4 Savijte gornje ručke i zakucajte ih zakovicama.

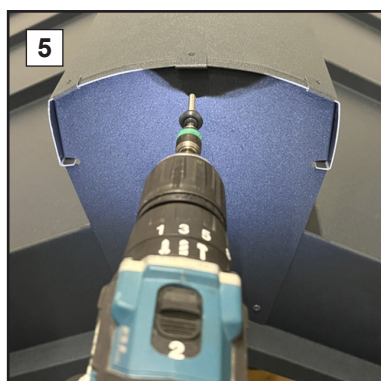

5 Pričvrstite stranu slemena pomoću vijka sa gumenom zaptivkom.

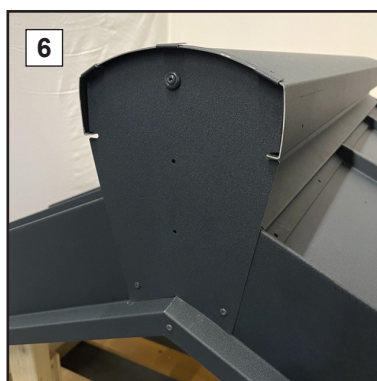

6 Detalj pravilne ugradnje UNI čela slemenjaka.